

S & S

OFFICE INTERIORS LTD

OFFICE FIT OUT - FURNITURE - PARTITIONING
SHOWROOM

SECUR 24



Adjustments Secur24 Basic



Headrest

Raise the headrest to adjust it in height. Rotate the headrest to adjust the angle.



Armrests

Flip up:

Rotate the wheel located under the front end of the armrests to adjust the angle up or down. Raise the armrests at the front to flip it backwards.

Multi (optional):

Depress the button located under the armrests to adjust the height.

Twisting the upper part of the armrests establishes the direction.



Pelvis support / depth setting

Rotate the wheel to adjust the pelvis support / depth setting.



Back angle adjustment

Rotate the wheel to adjust the back angle.



Weight setting

Rotate the knob clockwise to increase the weight resistance in the rocking motion. Rotate knob anti-clockwise to decrease the weight resistance. Check that the weight resistance balances your body weight.



Seat height adjustment

Raise the lever to adjust the seat height. Adjust seat to the desired height. Release lever to lock.

Check that your feet are firmly on the floor.



Seat angle adjustment

Raise lever to adjust the angle of the seat.

Push lever down to lock position.



Optional: seat depth setting

With the lever the seat depth can be adjusted.

